


NEW!

Cath-Tip IV *Quantum*

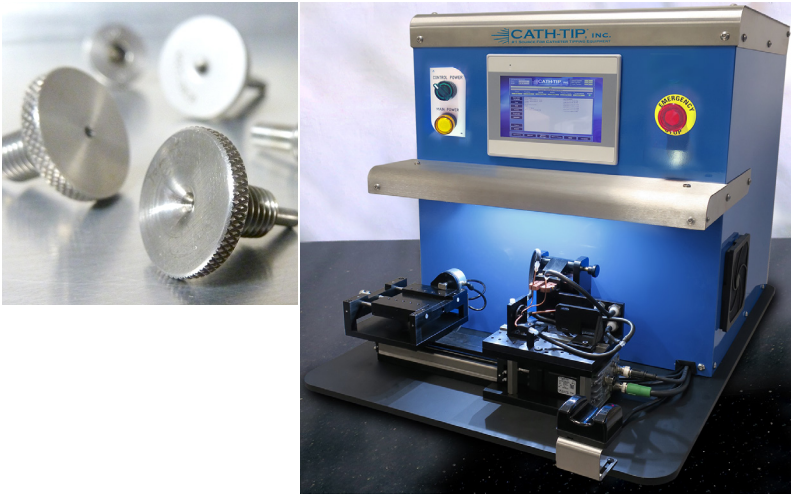

Same Superior Catheter Tipping – Smaller Footprint!

The Quantum uses the most flexible RF architecture on the market to tip, flare and bond almost all thermo-plastic materials to exacting standards. Produce the highest quality parts with speed and consistency on this precision catheter forming system. Achieve flashless tips and smooth bonds using our proven process. Cath-Tip machines operate in the largest medical manufacturing environments, as well as small R&D labs, around the globe. Cath-Tip – the #1 source for tipping equipment since 1995.

Contact us for a quote!

435-628-1775

sales@cathtip.com

www.cathtip.com

4012 South River Road, Suite 4B

St. George, UT 84790

Cath-Tip[®] is a registered trademark of St. George Medical Machine Company DBA Cath-Tip, Inc. 012519

BENEFITS

- Powered by Ambrell RF generator
- Turnkey ready
- PLC controlled
- Compact footprint – 21" x 31" x 23"
- Benchtop design
- Power output: 1.2 kW @ 400kHz
- Semi-automatic carriage minimizes operator variability
- Modular “black box” tooling design
- LED illumination
- Quick disconnect for RF, air, & IR sensor
- Anodized operation platform
- Closed-loop stepper motor
- Micro-controller operation of heat output and cooling
- Air cooling & clamping capability
- Multi-stage heating capability
- All surfaces clean-room suitable
- Optical touch sensor
- Corio refrigerated bath

Optional Add-Ons:

- Safety light curtain
- Second optical touch sensor